9. SECTIONAL DRAWINGS

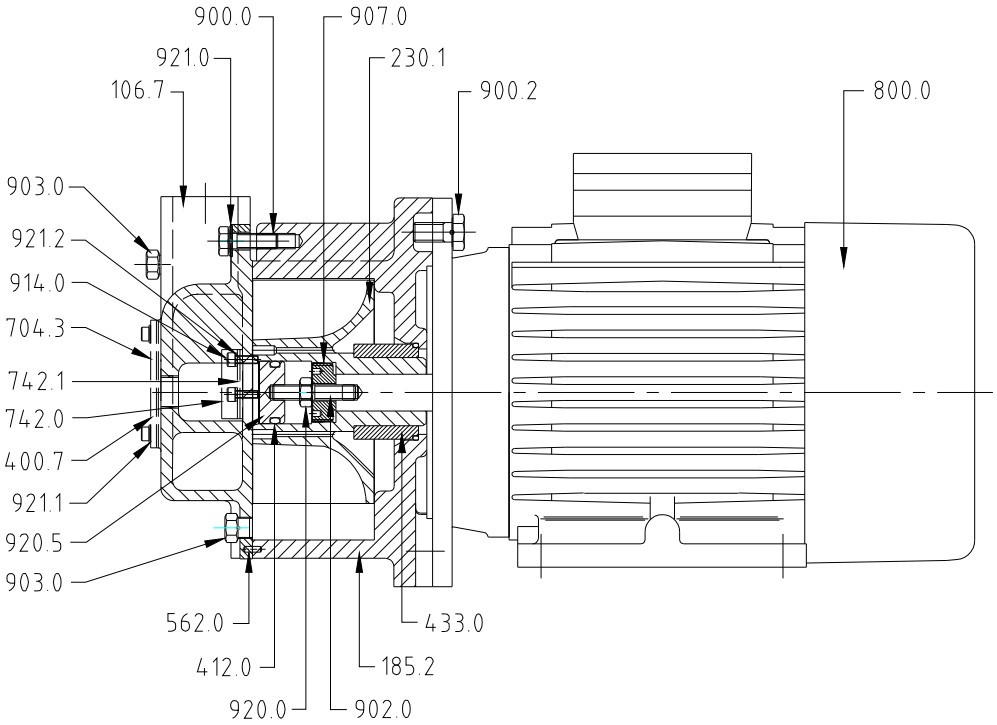

106.7	END CASING	900.0	SET SCREW
185.2	MOTOR ADAPTOR	900.2	SET SCREW
230.1	IMPELLER	902.0	STUD
400.7	INSPECTION COVER GASKET	903.0	PLUG
412.0	'O' RING	907.0	ADJUSTING NUT
433.0	MECHANICAL SEAL	914.0	CAP SCREW
562.0	DOWEL	920.0	NUT
704.3	INSPECTION COVER	920.5	SEALING NUT
742.0	VALVE PLATE RETAINER	921.0	WASHER
742.1	VALVE PLATE FLAP	921.1	WASHER
800.0	MOTOR	921.2	SPRING WASHER

Fig 4a LX0030 & LX0055 Pump Cross Sectional View and Parts List